

 


Colorovo

CityTab Supreme 10"

Tablet

* - functionality available depending on the model.

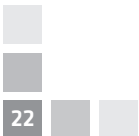



Device User Guide

Thank you for your purchase of the Colorovo CityTab Supreme 10" GPS tablet. We are sure that it will meet your expectations. Before using the device please read the following instructions.

Safety information

- Please adhere to these instructions and the markings on the device.
- Use this product only for its intended purpose.
- Do not store or use in extremely low or high temperatures (i.e. -0°C /+40°C).
- Do not leave the tablet in a car for a long time.
- Do not store or use in high dust conditions.
- Do not store or use in high humidity conditions.
- Do not store or use near naked flames.
- Protect the device from direct sunlight.
- Protect the device from contact with liquids (e.g. water).
- Protect the device from impact, falls and stress.
- Protect the device from strong electromagnetic radiation and electrostatic discharges.
- Do not connect the device to the power supply with wet hands. This can lead to damage, electric shock, short circuit or cause a fire.
- Do not operate the device with wet hands. This can lead to damage, electric shock, short circuit or cause a fire.
- Do not operate the device while driving. This may lead to traffic hazards, and is illegal in many countries.
- Observe restrictions on the use of electronic and radio devices.
- Do not install in a confined space (e.g. by building it in). Provide device ventilation.
- The device should be disposed of in accordance with environmental regulations.
- The charger can only work with a properly functioning electrical system (230V ~50Hz).
- Device charger is a Class II double insulated product with no external grounding.
- During data transmission, do not disconnect the device from the computer or storage media.
- Regularly back up your data.
- Immediately unplug any device which is operating incorrectly or damaged, and send it to the guarantor's service.





- Do not make repairs or modifications to the device and its accessories.
- The guarantor is not liable for damage or loss of data.

 
Hearing protection information

- This device complies with the applicable rules for consumer audio devices on the limitation of output volume to a safe level.
- Listening to the device at high volume through headphones or earphones may cause permanent damage to your hearing.
- Even if you are accustomed to listening to sound at high volume and the level of it seems to be normal, this does not exclude the risk of hearing damage. Turn down the volume to a reasonable level to avoid permanent damage to your hearing.
- In case of an impression of „ringing“ in the ears, immediately turn down the volume or turn off the device.
- The device's sound has been tested by connecting the headphones attached to it.
- To protect your hearing, use only the following headphone types: headphones that meet the requirements of applicable laws. Other types of headphones can generate a higher level of sound (protracted listening to sound at maximum volume can damage your hearing).
- Sounds can affect your sense of direction.
- Do not use the device while driving. This may lead to traffic hazards, and is illegal in many countries.
- Be very careful when using the device in hazardous situations resulting from limited hearing ability, or temporarily discontinue device use.
- If headphones have an „open“ construction (i.e. allow ambient sound reception), do not turn up the volume so that sound from the headphones drowns out the sounds of the environment.
- The „comfortable hearing“ level adapts over time to a greater volume. The sound level, which appears „normal“ to the user can actually be very high and can be harmful to your hearing. Protect yourself against this phenomenon by setting a safe volume level before your hearing adapts to the volume.

To set a safe volume level:

1. Play the sound at low volume.
2. Slowly raise the volume to a level at which the sound can be heard clearly, without distortion, and is not disruptive.

This is a comfortable volume and should not be changed.

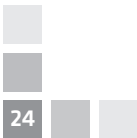



Descriptions of safety symbols



The lightning flash inside a triangle alerts the user to the presence of dangerous uninsulated voltage inside the product, which may constitute a risk of electric shock.

To reduce the risk of electric shock, do not remove the cover (back) of the device, because the housing does not contain user-serviceable parts. Servicing should be entrusted to qualified personnel.



The exclamation mark inside a triangle alerts the user to the presence of important operating and maintenance instructions in the documentation accompanying the product.



Proper disposal of this product. The device cannot be disposed of together with household waste. To prevent potential threats to the environment and human health due to improper disposal of waste, it is mandatory to take used electronic equipment to a designated collection point, or to the place where the product was purchased for the purpose of recycling electronic waste.



A CE Declaration of Conformity is available at the registered office ABC Data S.A., 14 Daniszewska Street, 03-230 Warsaw, Poland and on the product's sub-page at http://colorovo.eu/tablet_pc_en.html?product_id=2613 in the tab „Downloads”. This applies to countries where the use of the product is not subject to any restrictions: Austria, Belgium, Denmark, Finland, Greece, Spain, the Netherlands, Ireland, Iceland, Luxembourg, Norway, Portugal, the United Kingdom, Italy and Sweden.



RoHS. The components used in the device ensure its compliance with the requirements for reducing the use of certain substances which may adversely affect the environment in electrical and electronic equipment (RoHS Directive 2002/95/EC).

Legal information

 
Copyright © 2012–2014 ABC Data S.A. All rights reserved.

Colorovo and CityTab are registered and legally protected trademarks, the use of which in any way without ABC Data S.A. permission is forbidden.

All registered names and trademarks mentioned on the device, packaging and accompanying materials are used only for identification and are the property of their respective owners.

The guarantor is not liable for loss of data or other damages arising in any way from the use of the CityTab Supreme 10" tablet.

Third-party software supplied with the CityTab Supreme 10" tablet may be developed by entities unrelated to the Guarantor and may be owned by those entities. The guarantor is not liable for the software.

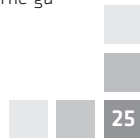



This user guide is not covered by the warranty, and the appearance and/or functionality of the software installed on the device may be different from the one described. The Guarantor reserves the right to modify the user guide at any time without prior notice.

 
Package contents

- Colorovo CityTab Supreme 10" tablet
- Charger 230V ~50 Hz / 9V 2A
- Cable USB-microUSB
- Manual guide

Buttons and connectors

1. Headphone socket
2. Front camera
3. Rear camera
4. Power button
 - Press and hold for a few seconds to turn the device on/off
 - Press briefly to lock/unlock the screen
 - Press and hold for more than 10 seconds to reset the device
5. Adjusting volume
 - Press „+“ to increase the volume of sound played by the speaker or headphones
 - Press „-“ to decrease the volume of sound played by the speaker or headphones
6. Touch screen
7. MicroSD/SDHC memory card slot
8. MicroUSB port: is used to connect the device to a computer via a USB cable to charge the battery* or send data. It also enables the use of external devices such as external hard drives, keyboards, mice, etc.
9. MiniHDMI port
10. Microphone
11. DC
12. Integrated speaker
13. Windows key: press this button to return to the Start screen.
14. Reset
15. Light sensor



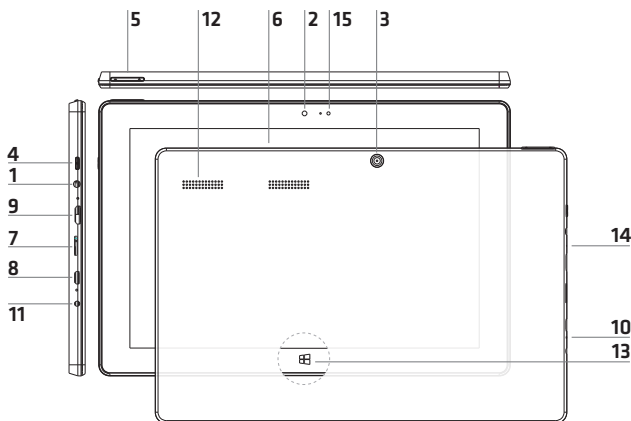


Tablet operation

Battery charging

To charge the battery, connect the tablet to attached AC charger.

Note:

 - Before using the tablet for the first time, perform three cycles of full battery charge and discharge to ensure optimum operating parameters.
- Full charge takes a few hours.
- Charge the battery at least once a month to maintain its efficiency.
- If the device turns off because of a discharged battery, charge it for at least five minutes before restarting.
- Disconnect the unused charger from its socket to reduce unnecessary power consumption.

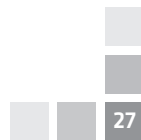



Turning the tablet on/off

To turn the tablet on:

1. Press and hold the power button until you see the boot screen.
2. The system will start up in about 1 minute.

To turn the tablet off:

1. Press and hold the power button until you see the „Turn off“ button on the screen
– tap it and select „OK“.

Note:

- The tablet will not be detected by the computer if it is turned off or in sleep mode.

Data transfer

To transfer data between the tablet and a computer:

1. Connect the tablet to the computer using the attached USB cable.
2. The device will be recognized by the computer as external memory.
3. Now you can copy files between the computer and the built-in tablet memory or the tablet's memory card.

Note:

- Do not disconnect the tablet from the computer or storage device during data transfer.
- The tablet will not be detected by the computer if it is turned off or in sleep mode

MicroSD memory card installation*

The device can read files from memory cards (microSD).

To install a memory card:

1. Insert the card in the correct position into the slot located on the device's edge.

SIM card installation*

The device requires a SIM card to operate a mobile network. It is used for telephone communications and 3G Internet connections.

To install a SIM card:

1. Turn the tablet off.
2. Insert the SIM card in the correct position into the slot located on the device's edge.
3. Turn the tablet on and configure the 3G connection if necessary.





Note:

- Pay particular attention to correct positioning of the SIM card when inserting.
- Turn the device off before inserting or removing the SIM card.

Reset

If the tablet does not respond to commands, it must be reset:

1. Press and hold the power button until the tablet is completely off.
2. Wait a few seconds and turn it on again.

 
Cleaning

Do not use aggressive detergents, including detergents containing alcohol, to clean the tablet.

1. Before cleaning, unplug the tablet from the power supply and any other devices.
2. We recommend using Colorovo cleaning products. Use a dry or slightly damp, non-scratch and lint-free cloth. Follow the detergent label instructions.

Windows User Guide

- Firstly, read the attached device manual.
- The manual describes basic system operation. Detailed information about Windows operation is available on the website <http://windows.microsoft.com/en-us/windows/how-to>

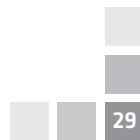



Troubleshooting

Problem

Solution

I cannot turn the tablet off

- The device's battery is completely discharged. Connect the tablet to the charger and try to turn it on again after about 5 minutes.

Tablet is not detected when connected to a computer

- Make sure the cable is properly inserted into the USB ports on the tablet and the computer.
- Make sure the tablet is not turned off or in sleep mode.
- Make sure the USB controller drivers are correctly installed.

Memory card is not detected

 
- Make sure the memory card is correctly inserted into the slot.
- Check if memory card contacts are clean.
- Check if the memory card is correctly formatted.

Tablet is not responding to commands

- Press and hold the power button until the tablet is completely off. Wait a few seconds and turn it on again.

Tablet often freezes

- Check for available software updates. Install them.
- Back up your data to external media, and then reset the tablet to factory settings.

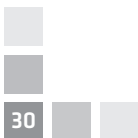



Technical specification

Model	CVT-CTS-10-QC
Processor (CPU)	1.33-1.5 GHz Quad Core Intel® Atom™ Processor Z3740D
Graphical processor (GPU)	Intel® HD Graphics
Memory (RAM)	2 GB DDR3
Built-in memory (FLASH)	32 GB NAND
OS	Windows 8.1
Display	10.1", IPS, 1280×800 pikseli
Touch interface	10-point capacitive
Jacks	1× microUSB 2.0 (Hi-Speed) 1× microSD/SDHC memory card jack 1× miniHDMI 1× headphone stereo minijack 3.5 mm
Wireless connection	WiFi (802.11 b/g/n) Bluetooth 4.0 Operation of external 3G modem via USB
Supported memory cards	microSD (max. 4 GB) microSDHC (max. 32 GB)
Camera	Front: 2.0 Mpix Rear: 5.0 Mpix
G-sensor	Built-in
Photo format	BMP, GIF, JPEG, PNG
Audio file format	AC3, AAC, APE, FLAC, MP3, OGG, WAV, WMA
Video file format	MPEG-1/2/4, h.263/264, AVS, MVC, RMVB, WMV
Battery	Built-in lithium-polymer 8000 mAh
Working time	From 6 to 8 hours
Temperature in the storage area	From -20°C to +65°C
Temperature in the workplace	From 0°C to +40°C
Relative humidity in the storage area	From 20% to 93% (in temp. 40°C)
Relative humidity in the workplace	From 20% to 90% (in temp. 40°C)
Charger	230V ~50 Hz / 9V 2A
Dimensions	258 × 172 × 9.7 mm
Weight	610 g
Certificates	CE, RoHS

